

DMX Values

9 Ch	Channel	Function	Value	Percent/Setting
	1	Dimmer H	000 ∘ 255	0–100%
	2	Dimmer L	000 ∘ 255	0–100%
	3	Strobe	000 ∘ 010 011 ∘ 132 133 ∘ 255	No function 0–20 Hz (All pods) 0–20 Hz (Random strobe macros)
	4	White 1	000 ∘ 255	0–100%
	5	White 2	000 ∘ 255	0–100%
	6	White 3	000 ∘ 255	0–100%
	7	White 4	000 ∘ 255	0–100%
	8	Auto Programs	000 ∘ 010 011 ∘ 040 041 ∘ 080 081 ∘ 120 121 ∘ 160 161 ∘ 200 201 ∘ 240 241 ∘ 255	No function Auto 1 Auto 2 Auto 3 Auto 4 Auto 5 Auto 6 No function
	9	Dimmer Speed	000 ∘ 010 011 ∘ 040 041 ∘ 080 081 ∘ 120 121 ∘ 255	Preset dimmer speed from display menu Nonlinear dimming curve 1 (fastest) Nonlinear dimming curve 2 Nonlinear dimming curve 3 (slowest) Preset dimmer speed from display menu

4 Ch	Channel	Function	Value	Percent/Setting
	1	White 1	000 ∘ 255	0–100%
	2	White 2	000 ∘ 255	0–100%
	3	White 3	000 ∘ 255	0–100%
	4	White 4	000 ∘ 255	0–100%

3 Ch	Channel	Function	Value	Percent/Setting
	1	Dimmer H	000 ∘ 255	0–100%
	2	Dimmer L	000 ∘ 255	0–100%
	3	Strobe	000 ∘ 010 011 ∘ 132 133 ∘ 255	No function 0–20 Hz (All pods) 0–20 Hz (Random strobe macros)

1 Ch	Channel	Function	Value	Percent/Setting
	1	Dimmer H	000 ∘ 255	0–100%

DMX Values (Cont.)

STRIKE™ 4 Pod Selection for DMX Control

