

DMX Values

13Ch	Channel	Function	Value	Percent/Setting
	1	Red	000○ 255	0–100%
	2	Fine Red	000○ 255	Fine control (16-bit)
	3	Green	000○ 255	0–100%
	4	Fine Green	000○ 255	Fine control (16-bit)
	5	Blue	000○ 255	0–100%
	6	Fine Blue	000○ 255	Fine control (16-bit)
	7	Amber	000○ 255	0–100%
	8	Fine Amber	000○ 255	Fine control (16-bit)
	9	White	000○ 255	0–100%
	10	Fine White	000○ 255	Fine control (16-bit)
	11	UV	000○ 255	0–100%
	12	Fine UV	000○ 255	Fine control (16-bit)
	13	Dimmer Speed	000○ 051	Preset dimmer speed from display menu
			052○ 101	Dimming curve off (linear dimmer)
			102○ 152	Nonlinear dimming curve 1 (fastest)
			153○ 203	Nonlinear dimming curve 2
			204○ 255	Nonlinear dimming curve 3 (slowest)

DMX Values (Cont.)

12Ch	Channel	Function	Value	Percent/Setting
	1	Dimmer	000↻ 255	0–100%
	2	Red	000↻ 255	0–100%
	3	Green	000↻ 255	0–100%
	4	Blue	000↻ 255	0–100%
	5	Amber	000↻ 255	0–100%
	6	White	000↻ 255	0–100%
	7	UV	000↻ 255	0–100%
	8	Strobe	000↻ 010 011↻ 255	No function Slow to fast
	9	Color Macro + White Balance	000↻ 010 011↻ 030 031↻ 050 051↻ 070 071↻ 090 091↻ 110 111↻ 130 131↻ 150 151↻ 170 171↻ 200 201↻ 205 206↻ 210 211↻ 215 216↻ 220 221↻ 225 226↻ 230 231↻ 235 236↻ 240 241↻ 245 246↻ 250 251↻ 255	No function R: 100% G: 0–100% B: 0 R: 100%–0G: 100% B: 0 R: 0 G: 100% B: 0–100% R: 0 G: 100%–0 B: 100% R: 0–100%G: 0 B: 100% R: 100% G: 0 B: 100%–0 R: 100% G: 0–100% B: 0–100% R: 100%–0G: 100%–0 B: 100% R: 100% G: 100% B: 100% A: 100% White 1 White 2 White 3 White 4 White 5 White 6 White 7 White 8 White 9 White 10 White 11
	10	Auto Programs	000↻ 010 011↻ 060 061↻ 120 121↻ 180 181↻ 240 241↻ 255	No function Auto program 1 Auto program 2 Auto program 3 Auto program 4 Auto program 0 (Auto 1–4)
	11	Auto Speed	000↻ 255	Slow to fast (when channel 10 is 011–255)
	12	Dimmer Speed	000↻ 051 052↻ 101 102↻ 152 153↻ 203 204↻ 255	Preset dimmer speed from display menu Dimming curve off (linear dimmer) Nonlinear dimming curve 1 (fastest) Nonlinear dimming curve 2 Nonlinear dimming curve 3 (slowest)

DMX Values (Cont.)

8 Ch	Channel	Function	Value	Percent/Setting
	1	Dimmer	000○ 255	0–100%
	2	Red	000○ 255	0–100%
	3	Green	000○ 255	0–100%
	4	Blue	000○ 255	0–100%
	5	Amber	000○ 255	0–100%
	6	White	000○ 255	0–100%
	7	UV	000○ 255	0–100%
	8	Strobe	000○ 010 011○ 255	No function Slow to fast

6 Ch	Channel	Function	Value	Percent/Setting
	1	Red	000○ 255	0–100%
	2	Green	000○ 255	0–100%
	3	Blue	000○ 255	0–100%
	4	Amber	000○ 255	0–100%
	5	White	000○ 255	0–100%
	6	UV	000○ 255	0–100%

HSV	Channel	Function	Value	Percent/Setting
	1	Hue	000○ 255	0–100%
	2	Saturation	000○ 255	0–100%
	3	Value	000○ 255	0–100%

HSI	Channel	Function	Value	Percent/Setting
	1	Hue	000○ 255	0–100%
	2	Saturation	000○ 255	0–100%
	3	Intensity	000○ 255	0–100%