
COLORdash ter-Qued 18

User Manual



Model ID: COLORDASHPARQUAD18



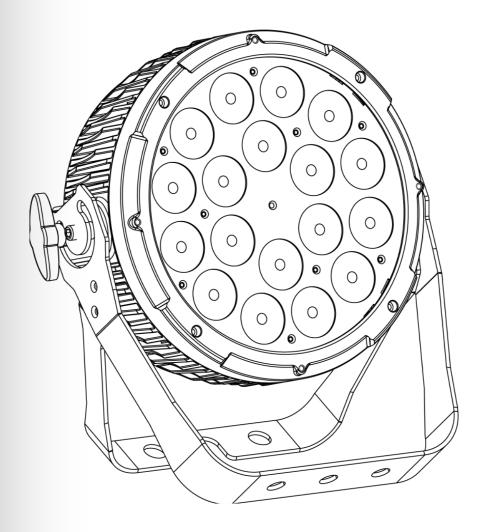

Edition Notes

The COLORdash Par-Quad 18 User Manual includes a description, safety precautions, installation, programming, operation and maintenance instructions for the COLORado 1QS as of the release date of this edition.

Trademarks

CHAUVET, the Chauvet logo and COLORdash Par-Quad 18 are registered trademarks or trademarks of Chauvet & Sons, LLC (d/b/a Chauvet and Chauvet Lighting) in the United States and other countries. Other company and product names and logos referred to herein may be trademarks of their respective companies.

Copyright Notice

The works of authorship contained in this manual, including, but not limited to, all design, text and images are owned by Chauvet.

© Copyright 2020 Chauvet & Sons, LLC. All rights reserved.

Electronically published by Chauvet in the United States of America.

Manual Use

Chauvet authorizes its customers to download and print this manual for professional information purposes only. Chauvet expressly prohibits the usage, copy, storage, distribution, modification, or printing of this manual or its content for any other purpose without written consent from Chauvet.

Document Printing

For best results, print this document in color, on letter size paper (8.5 x 11 in), double-sided. If using A4 paper (210 x 297 mm), configure the printer to scale the content accordingly.

Intended Audience

Any person installing, operating, and/or maintaining this product should completely read through the guide that shipped with the product, as well as this manual, before installing, operating, or maintaining this product.

Disclaimer

Chauvet believes that the information contained in this manual is accurate in all respects. However, Chauvet assumes no responsibility and specifically disclaims any and all liability to any party for any loss, damage or disruption caused by any errors or omissions in this document, whether such errors or omissions result from negligence, accident or any other cause. Chauvet reserves the right to revise the content of this document without any obligation to notify any person or company of such revision, however, Chauvet has no obligation to make, and does not commit to make, any such revisions. Download the latest version from www.chauvetprofessional.com.

Document Revision

The COLORdash Par-Quad 18 User Manual is the 6th edition of this document. Go to www.chauvetprofessional.com for the latest version.



Table of Contents

1. Before You Begin	1
What Is Included	
Claims	
Manual Conventions	
Symbols	
Safety Notes	
Personal Safety	
Mounting and Ŕigging	
Power and Wiring	
Operation	2
Expected LED Lifespan	2
2. Introduction	3
Product Description	
Features	
Product Overview	
Product Dimensions	
3. Setup	5
AC Power	5
AC Plug	
Fuse Replacement	
Power Linking	
DMX Linking	
DMX Modes	
Master/Slave Connectivity	
Mounting	
Orientation	
Rigging	
4. Operation	8
•	
Control Panel Description	
Control Options	
Programming	
DMX Personality	
DMX Control	
Static Color	
Auto Programs	
Auto Test	
Dimmer Curves	
Software Information	
Fixture Hours	
Backlite	
White Balance	
Menu Map	
DMX Values	
5. Technical Information	
Product Maintenance	
Returns	
Technical Specifications	
Contact Us	15



1. Before You Begin

What Is Included • COLORdash Par-Quad 18

- Power Cable
- Gel Frame Holder
- Gel Frame
- Quick Reference Guide

Claims Carefully unpack the product immediately and check the container to make sure all the parts are in the package and are in good condition.

> If the box or the contents (the product and included accessories) appear damaged from shipping, or show signs of mishandling, notify the carrier immediately, not Chauvet. Failure to report damage to the carrier immediately may invalidate your claim. In addition, keep the box and contents for inspection.

> For other issues, such as missing components or parts, damage not related to shipping, or concealed damage, file a claim with Chauvet within 7 days of delivery.

Manual Conventions

Meaning		
A range of values in the text		
A set of mutually exclusive values in the text		
A button on the product's control panel		
A product function or a menu option		

Symbols

Symbols	Meaning
<u> </u>	Critical installation, configuration, or operation information. Failure to comply with this information may cause the product not to work, damage third-party equipment, or cause harm to the operator.
\mathbf{i}	Important installation or configuration information. Failure to comply with this information may keep the product from working.
	Useful information.



The term "DMX" used throughout this manual refers to the USITT DMX512-A digital data transmission protocol.



Safety Notes

Read all the following Safety Notes before working with this product. These notes include important information about the installation, usage, and maintenance of this product.



This product contains no user-serviceable parts. Any reference to servicing in this User Manual will only apply to properly trained Chauvet certified technicians. Do not open the housing or attempt any repairs.



All applicable local codes and regulations apply to proper installation of this product.

Personal Safety

- The luminaire should be positioned so that prolonged staring into the luminaire at a distance closer than 9.5 ft (2.9 m) is not expected.
- If the external flexible cable or cord of this luminaire is damaged, it shall be replaced by a special cord or cord exclusively available from the manufacturer or his service agent.
- The light source contained in this luminaire shall only be replaced by the manufacturer or his service agent or a similar qualified per-son.
- The luminaire is intended for professional use only.
- Avoid direct eye exposure to the light source while the product is on.
- Always disconnect this product from its power source before servicing.
- Always connect this product to a grounded circuit to avoid the risk of electrocution.
- Do not touch this product's housing during operation because it may be very hot.

Mounting and Rigging

- Do not operate this product outdoors or in any location where dust, excessive heat, water, or humidity may affect it.
- CAUTION: When transferring product from extreme temperature environments, (e.g. cold truck to warm humid ballroom) condensation may form on the internal electronics of the product. To avoid causing a failure, allow product to fully acclimate to the surrounding environment before connecting it to power.
- Make sure there are no flammable materials close to this product while it is operating.
- When hanging this product, always secure to a fastening device using a safety cable.

Power and Wiring

- Always make sure you are connecting this product to the proper voltage in accordance with the specifications in this manual or on the product's specification label.
- To eliminate unnecessary wear and improve its lifespan, during periods of non-use completely disconnect the product from power via breaker or by unplugging it.
- Never connect this product to a dimmer pack or rheostat.
- Never disconnect this product by pulling or tugging on the power cable.

Operation

- Do not operate this product if you see damage on the housing, lenses, or cables. Have the damaged parts replaced by an authorized technician at once.
- Do not cover the ventilation slots when operating to avoid internal overheating.
- The maximum ambient temperature is 104 °F (40 °C). Do not operate this product at a higher temperature.
- In case of a serious operating problem, stop using this product immediately!



In the unlikely event that your Chauvet product may require service, contact Chauvet Technical Support.

Expected LED Lifespan

Over time, use and heat will gradually reduce LED brightness. Clustered LEDs produce more heat than single LEDs, contributing to shorter lifespans if always used at full intensity. The average LED lifespan is 40,000 to 50,000 hours. To extend LED lifespan, maintain proper ventilation around the product, and limit the overall intensity.



2. Introduction


Product Description

The COLORdash Par-Quad 18 is a high-power quad color RGBA LED wash product. This product consists of a single module that houses the internal power supply, the control panel, the LED drivers, the LED boards, as well as the power and signal connectors. The COLORdash Par-Quad 18 includes one double-bracketed yoke that can be a floor mount or hanging support bracket.

Features


- 4-, 6-, or 10-channel quad color LED wash product
- Operating modes:
 - 4-channel: RGBA
 - 6-channel: RGBA, dimmer, strobe
 - 10-channel: RGBA, dimmer, strobe, macro, auto, dim mode, auto speed
- Silent, flicker-free operation
- Lightweight, easy to install
- 16-bit dimming with selectable dimming curves
- All metal construction for added durability


Product Overview

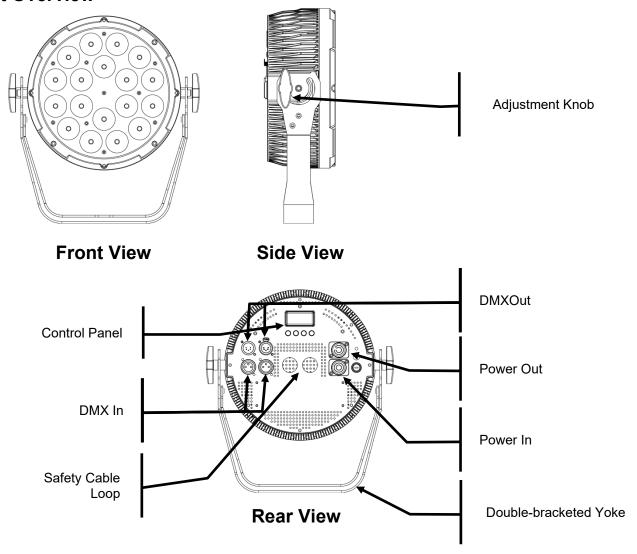



Product Dimensions

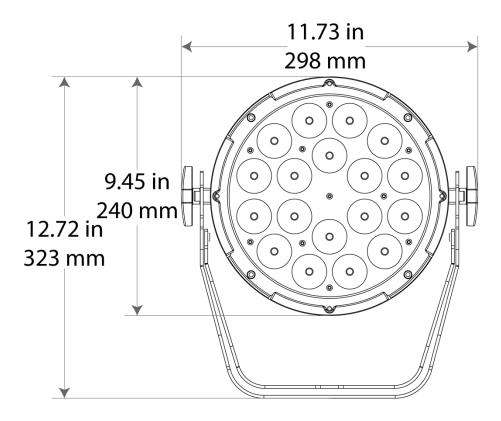

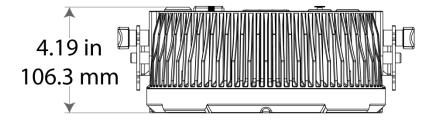



3. Setup

AC Power

Each COLORdash Par-Quad 18 has an auto-ranging power supply that works with an input voltage range of 100~240 VAC, 50/60 Hz. To determine the power requirements for each COLORdash Par-Quad 18, refer to the label affixed to the product. You can also refer to the Technical Specifications chart in this manual.

The listed current rating indicates the maximum current draw during normal operation. For more information, download Sizing Circuit Breakers from the Chauvet website: www.chauvetprofessional.com.

 Always connect this product to a protected circuit with an appropriate electrical ground to avoid the risk of electrocution or fire.



To eliminate unnecessary wear and improve its lifespan, during periods of nonuse completely disconnect the product from power via breaker or by unplugging it.



Never connect this product to a rheostat (variable resistor) or dimmer circuit, even if the rheostat or dimmer channel serves only as a 0 to 100% switch.

AC Plua

The COLORdash Par-Quad 18 comes with a power input cord terminated with a Neutrik® powerCON® A connector on one end and an Edison plug on the other end (U.S. market). If the power input cord that came with your product has no plug, or if you need to change the Edison plug, use the table below to wire the new plug.

Connection	Wire (U.S.)	Wire (Europe)	Screw Color
AC Live	Black	Brown	Yellow or Brass
AC Neutral	White	Blue	Silver
AC Ground	Green/Yellow	Green/Yellow	Green



Make sure to disconnect the product's power cord before replacing a blown fuse. Always replace with a fuse of the same type and rating.

Fuse Replacement

- 1. Disconnect the product from power.
- 2. Using a flat head screwdriver, unscrew the fuse holder cap from the housing.
- 3. Remove the blown fuse and replace with another fuse of the same type and rating (T 3.15 A, 250 V).
- 4. Screw the fuse holder cap back in place and reconnect power.



Power Linking

The COLORdash Par-Quad 18 supports power linking. You can power link up to 11 products at 100 VAC, 13 products at 120 VAC, 22 products at 208 VAC, 24 products at 230 VAC, or 25 products at 240 VAC.

This product comes with a power input cord. This product does not come with a power linking cable; however, a power linking cable is available as an option.

DMX Linking

You can link the COLORdash Par-Quad 18 to a DMX controller using a standard DMX serial connection. If using other DMX compatible products with the COLORdash Par-Quad 18, you can control each individually with a single DMX controller.

DMX Modes

The COLORdash Par-Quad 18 uses the standard DMX data connection for the 4-, 6-, and 10-channel DMX modes.

- Refer to the <u>Introduction</u> chapter for a brief description of these modes.
- Refer to the <u>Operation</u> chapter to learn how to configure the COLORdash Par-Quad 18 to work in these modes.
- The <u>DMX Values</u> section will provide you with detailed information regarding the DMX modes.

Master/Slave Connectivity

The Master/Slave mode allows a COLORdash Par-Quad 18 (the "master product") to control one or more COLORdash Par-Quad 18s (the "slave products") without a DMX controller. One COLORdash Par-Quad 18 becomes the master product when running an Auto or Fixed program, or by being in Manual mode.

You must configure each slave product's control panel to operate in SLAVE mode. During Master/Slave operation, the slave products will operate in unison with the master product.



DO NOT connect a DMX controller to products operating in Master/Slave mode. The DMX controller signals may interfere with the signals from the master product.



The Operation chapter of this manual provides detailed instructions on how to configure the Master and Slave products.



If you are not familiar with or need more information about DMX standards, Master/Slave connectivity, or the DMX cables needed to link this product to a DMX controller, download the DMX Primer from the Chauvet website: www.chauvetprofessional.com.



Mounting

Before mounting this product, read and follow the <u>Safety Notes</u>. For our CHAUVET® Professional line of mounting clamps, go to http://trusst.com/products/.

Orientation

Always mount this product in a safe position and make sure there is adequate room for ventilation, configuration, and maintenance.


Rigging

The COLORdash Par-Quad 18 consists of a double-bracketed yoke and the body of the product Chauvet recommends using the following general guidelines when mounting this product.

- When selecting an installation location, consider easy access to this product for operation, programming adjustments, and routine maintenance.
- Make sure to mount this product away from any flammable material as indicated in the <u>Safety Notes</u>.
- Never mount in places where rain, high humidity, extreme temperature changes, or restricted ventilation may affect the product.
- If hanging this product, make sure that the mounting location can support the
 product's weight. Refer to the <u>Technical Specifications</u> chart for the weight-bearing
 requirements of this product.
- When hanging this product, always secure to a fastening device using a safety cable.

Procedure

The COLORdash Par-Quad 18 comes with a double-bracketed yoke to which you can either attach mounting clamps for hanging or simply use as a floor stand. You must supply your own mounting clamps. Make sure the clamps are capable of supporting the weight of this product. You will have to use at least one mounting point per product.

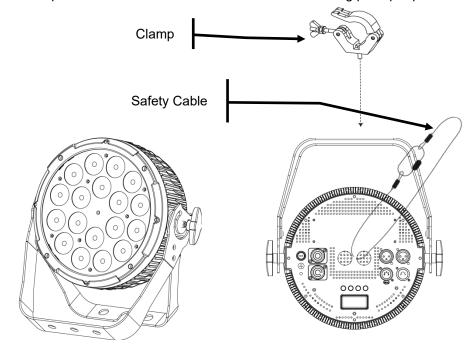

Product Mounting Diagram

Floor Mounting

Overhead Mounting



4. Operation

Control Panel Description

Button	Function
<menu></menu>	Exits from the current menu or function
<enter></enter>	Enables the currently displayed menu or sets the currently selected value in to the current function
<up></up>	Navigates upward through the menu list and increases the numeric value when in a function
<down></down>	Navigates downward through the menu list and decreases the numeric value when in a function

Control Options

You can set the COLORdash Par-Quad 18 start address in the 001~512 DMX range. This enables control of up to 51 products in the 10-channel **10 CH** personality.

Programming

Refer to the Menu Map to understand the menu options. The menu map shows the main level and a variable number of programming levels for each option.

- To go to the desired main level, press <MENU> repeatedly until the option shows on the display. Press <ENTER> to select. This will take you to the first programming level for that option.
- To select an option or value within the current programming level, press <UP> or <DOWN> until the option shows on the display. Press <ENTER> to select. In this case, if there is another programming level, you will see that first option, or you will see the selected value.
- Press <MENU> repeatedly to exit to the previous main level.

DMX Personality

This setting allows you to choose a particular DMX personality.

- 1. Go to the Channel main level.
- 2. Select the desired personality (4 Ch, 6 Ch, or 10 Ch).



- See the DMX Values section for the highest starting address you can select for each personality.
- Make sure that the starting addresses on the various products do not overlap due to the new personality setting.

DMX Control

In this mode, each product will respond to a unique starting address from the DMX controller. All products with the same starting address will respond in unison.

- Select a DMX personality as shown in DMX Personality.
- 2. Set the running mode:
 - a. Go to the M&S Mode main level.
 - b. Select Slave.
- 3. Set the starting address:
 - a. Go to Address main level.
 - b. Select the starting address (001~509).



DMX Mode	DMX Address
4 Ch	509
6 Ch	507
10 Ch	503

The highest recommended starting address for each DMX mode are as follows:

COLORdash Par-Quad 18 User Manual Rev. 6



Static Color The Static Color mode allows for permanent RGBA color mixing without a DMX controller.

- 1. Go to the **Static** main level.
- 2. Select the Fix C.
 - a. Choose desired color combination.
- 3. Select the Manu C
 - a. Select Color (RGBA)
 - b. Select the desired color value (000~255).
 - c. Repeat for the other colors.

Auto Programs Auto programs allow for dynamic RGBA color mixing without a DMX controller.

- 1. Go to **AUTO** Main Level.
- 2. Select the desired auto (Auto. 1~5).
- 3. Select Speed.
- 4. Choose the desired speed value (000~100).



You cannot edit any of the auto programs (AUTO 1~5).

Auto Test

This option allows you to test all the LED's on the COLORdash Par-Quad 18.

- 1. Go to Info Main Level.
- Select Auto > Test.

Master/Slave

The Master/Slave mode allows a group of COLORdash Par-Quad 18s (the slave products) to simultaneously duplicate the output of another COLORdash Par-Quad 18 (the master product) without a DMX controller.

- 1. Set each of the slave products:
 - a. Go to M&S Mode.
 - b. Select Slave.
- 2. Set the master product:
 - a. Go to M&S Mode.
 - b. Select Master.
 - c. Select an Auto or Static program as explained in Auto Programs.
- The master product is the one that runs a program whether in Auto, or Static Color mode.



- Do not connect a DMX controller to the products configured for Master/Slave operation. The DMX controller may interfere with signals from the master product.
- The master product should be the first product in the daisy chain.



Dimmer Curves

This setting determines how fast the output of the COLORdash Par-Quad 18 changes when you modify the values of the Red, Green, Blue, White, and Dimmer faders. This setting provides four different options to simulate the dimming curve of an incandescent lighting product.

- 1. Go to the **Dimmer Mode** main level.
- 2. Select a dimmer curve (OFF, DIM1, DIM2, or DIM3).

OFF: The output is proportional (linear) to the Dimmer and RGBA channel values.



DIM1~3:

The output follows the Dimmer and RGBA channel values based on the corresponding dimmer curve, being **DIM1** the fastest and **DIM3** the slowest.

Software Information

This option shows what version of software the COLORdash Par-Quad 18 is running.

- 1. Go to the **Info** main level.
- 2. Select **Version**. (the version number will show on the screen)

Fixture Hours

This option shows the total amount of hours the COLORdash Par-Quad 18 has been turned on.

- 1. Go to the **Info** main level.
- 2. Select **FixHours**. (the hours will show on the screen)

Backlite

This setting allows you to set the amount of time the backlite on the COLORdash Par-Quad 18 stays on after the last button is pressed on the control panel.

- 1. Go to the BackLite main level.
- 2. Select On, 10S, 20S, or 30S.
- Press **<ENTER>**.

White Balance

This setting allows you to select the white color shown by the COLORdash Par-Quad 18 when the DMX controller's Red, Green, and Blue faders are set to "255."

- Go to the White Balance main level.
- 2. Select a color (R, G, or B).
- 3. Select a color value (125~255).
- 4. Repeat for the other colors.



When selecting White Balance, you will only be able to define the values of Red, Green, and Blue.



The values of Red, Green, and Blue configured from White Balance will define the color temperature shown when the RGB faders are set to "255".



Menu MapRefer to the COLORdash Par-Quad 18 product page on www.chauvetprofessional.com for the latest menu map.

Main Level	Programming Levels			Description			
Auto	Auto	1~5	Speed 0~100		0~100	5 automatic programs	
				R		Red	
	Fix C		G			Green	
			В			Blue	
			A			Amber	
			GB		}	Green/Blue	
					}	Red/Blue	
					ì	Red/Green	
				RGE	В	Red/Green/Blue	
			RA			Red/Amber	
Static			GA		1	Green/Amber	
			BA			Blue/Amber	
			RGA		A	Red/Green/Amber	
			RBA		4	Red/Blue/Amber	
			GBA		Α	Green/Blue/Amber	
						Red/Green/Blue/Amber	
		R					
		G			0~255	Combine red, green, blue, and amber to make a	
	Manu C		B Value	е		custom color	
			<u> </u>				
			Off	<u> </u>		No dimmer	
Dim Mode		DIN	1 1~3			Dimmer curve	
	108			Turns off display backlight after 10 sec of inactivity			
						Turns off display backlight after 20 sec of	
BackLite	20\$					inactivity	
	200					Turns off display backlight after 30 sec of	
		30S				inactivity	
		(On			Display backlight always on	
	Au	to	Test		t	Turns on all LEDs in sequence for testing	
Info		Fix	FixHours			Shows total product hours	
		Version			Shows installed software version		
Address		001	~509			Selects DMX address (highest channel restricted	
Address		001	-503			to personality chosen)	
			Ch	Ch		4-channel: R/G/B/A control	
Channel		6	Ch			6-channel: R/G/B/A, dimmer, strobe	
		10 Ch				10-channel: R/G/B/A dimmer, strobe, color	
						macro, auto, dimmer speed, auto speed	
M&S Mode			ster			DMX mode	
		SI	ave	1		Slave mode	
	R		Value		125~255	Sets red LED maximum value	
White Balance	G	Va				Sets green LED maximum value	
	В					Sets blue LED maximum value	



DMX Values

10-Ch

7 Color Macro + White Balance 031 ⇔ 050	B: 0~100% b~0 B: 100% B: 100% B: 100%~0 0% B: 0~100% b~0 B: 100%
3 Green 000 ⇔ 255 0~100% 4 Blue 000 ⇔ 255 0~100% 5 Amber 000 ⇔ 255 0~100% 6 Strobe 000 ⇔ 010 No Function Slow to Fast 000 ⇔ 010 No Function 011 ⇔ 030 R: 100% G: 0~100% 031 ⇔ 050 R: 100%~0 G: 100% 051 ⇔ 070 R: 0 G: 100% 071 ⇔ 090 R: 0 G: 100% 091 ⇔ 110 R: 0~100% G: 0 111 ⇔ 130 R: 100% G: 0 111 ⇔ 150 R: 100% G: 0 111 ⇔ 170 R: 100%~0 G: 100% 171 ⇔ 200 R: 100% G: 0~10 151 ⇔ 170 R: 100%~0 G: 100% 171 ⇔ 200 R: 100% G: 100% 091 ⇔ 205 White 1 000 ⇔ 210 White 2	B: 0 B: 0~100% b~0 B: 100% B: 100% B: 100%~0 0% B: 0~100% b~0 B: 100%
4 Blue 000 ⇔ 255 0~100% 5 Amber 000 ⇔ 255 0~100% 6 Strobe 000 ⇔ 010 No Function Slow to Fast 000 ⇔ 010 No Function 011 ⇔ 255 Slow to Fast 000 ⇔ 010 No Function 011 ⇔ 030 R: 100% G: 0~10 031 ⇔ 050 R: 100%~0 G: 100% 051 ⇔ 070 R: 0 G: 100% 071 ⇔ 090 R: 0 G: 100% 091 ⇔ 110 R: 0~100% G: 0 111 ⇔ 130 R: 100% G: 0 131 ⇔ 150 R: 100% G: 0~10 151 ⇔ 170 R: 100%~0 G: 100% 171 ⇔ 200 R: 100% G: 100%	B: 0 B: 0~100% b~0 B: 100% B: 100% B: 100%~0 0% B: 0~100% b~0 B: 100%
4 Blue 000 ⇔ 255 0~100% 5 Amber 000 ⇔ 255 0~100% 6 Strobe 000 ⇔ 010 No Function Slow to Fast 000 ⇔ 010 No Function 011 ⇔ 255 Slow to Fast 000 ⇔ 010 No Function 011 ⇔ 030 R: 100% G: 0~10 031 ⇔ 050 R: 100%~0 G: 100% 051 ⇔ 070 R: 0 G: 100% 071 ⇔ 090 R: 0 G: 100% 091 ⇔ 110 R: 0~100% G: 0 111 ⇔ 130 R: 100% G: 0 131 ⇔ 150 R: 100% G: 0~10 151 ⇔ 170 R: 100%~0 G: 100% 171 ⇔ 200 R: 100% G: 100%	B: 0 B: 0~100% b~0 B: 100% B: 100% B: 100%~0 0% B: 0~100% b~0 B: 100%
5 Amber 000 ⇔ 255 0~100% 6 Strobe 000 ⇔ 010 No Function	B: 0 B: 0~100% b~0 B: 100% B: 100% B: 100%~0 0% B: 0~100% b~0 B: 100%
6 Strobe 000 ⇔ 010	B: 0 B: 0~100% b~0 B: 100% B: 100% B: 100%~0 0% B: 0~100% b~0 B: 100%
6 Strobe 011 ⇔ 255 Slow to Fast 000 ⇔ 010 No Function 011 ⇔ 030 R: 100% G: 0~10 031 ⇔ 050 R: 100%~0 G: 100% 051 ⇔ 070 R: 0 G: 100% 071 ⇔ 090 R: 0 G: 100% 091 ⇔ 110 R: 0~100% G: 0 111 ⇔ 130 R: 100% G: 0 111 ⇔ 130 R: 100% G: 0~10 151 ⇔ 170 R: 100%~0 G: 100% 171 ⇔ 200 R: 100% G: 100% 201 ⇔ 205 White 1 206 ⇔ 210 White 2	B: 0 B: 0~100% b~0 B: 100% B: 100% B: 100%~0 0% B: 0~100% b~0 B: 100%
7 Color Macro + White Balance 000 ⇔ 010	B: 0 B: 0~100% b~0 B: 100% B: 100% B: 100%~0 0% B: 0~100% b~0 B: 100%
211 ⇔ 215 White 3 216 ⇔ 220 White 4 221 ⇔ 225 White 5 226 ⇔ 230 White 6 231 ⇔ 235 White 7 236 ⇔ 240 White 8 241 ⇔ 245 White 9 246 ⇔ 250 White 10 251 ⇔ 255 White 11	
8 Auto Programs 000 ⇔ 051 No Function Auto 1 102 ⇔ 152 Auto 2 153 ⇔ 203 Auto 3 204 ⇔ 254 Auto 4 255 Auto 5	
9 Auto Speed 000 ⇔ 255 Slow to Fast	
10 Dimmer Speed Dimmer Speed 000 ⇔ 051	urve 1 (fastest) urve 2
Channel Function Value F	ercent/Setting
1 Dimmer 000 ⇔ 255 0~100%	
2 Red 000 ⇔ 255 0~100%	
3 Green 000 ⇔ 255 0~100%	
4 Blue 000 ⇔ 255 0~100%	
5 Amber 000 ⇔ 255 0~100%	
6 Strobe 000 ⇔ 010 No Function 011 ⇔ 255 Slow to Fast	
Channel Function Value F	ercent/Setting
1 Red 000 ⇔ 255 0~100%	
2 Green 000 ⇔ 255 0~100%	
3 Blue 000 ⇔ 255 0~100%	
4 Amber 000 ⇔ 255 0~100%	

6-Ch

4-Ch



5. Technical Information

Product Maintenance

To maintain optimum performance and minimize wear, you should clean this product frequently. Usage and environment are contributing factors in determining the cleaning frequency.

As a rule, clean this product at least twice a month. Dust build-up reduces light output performance and can cause overheating. This can lead to reduced light source life and increased mechanical wear.

To clean your product:

- Unplug the product from power.
- Wait until the product has cooled.
- Use a vacuum (or dry compressed air) and a soft brush to remove dust collected on the external vents and accessible internal components.
- Clean all external surfaces with a mild solution of non-ammonia glass cleaner or isopropyl alcohol.
- Apply the solution directly to a soft, lint-free cotton cloth or a lens cleaning tissue.
- Wipe any dirt or grime to the outside edges of the lens surface.
- Gently polish the lens surfaces until they are free of haze and lint.



Always dry the external surfaces thoroughly and carefully after cleaning them.

Returns

You must send the product prepaid, in the original box, and with the original packing and accessories. Chauvet will not issue call tags.

Call Chauvet and request a Return Merchandise Authorization (RMA) number before shipping the product. Be prepared to provide the model number, serial number, and a brief description of the cause(s) for the return.

To submit a service request online, go to www.chauvetprofessional.com/service-request. Clearly label the package with an RMA number. Chauvet will refuse any product returned without an RMA number.



DO NOT write the RMA number directly on the box. Instead, write it on a properly affixed label.

Once you have received the RMA number, include the following information on a piece of paper inside the box:

- Your name
- Your address
- Your phone number
- The RMA number
- A brief description of the problem(s)

Be sure to pack the product properly. Any shipping damage resulting from inadequate packaging will be the customer's responsibility. FedEx packing or double-boxing are recommended.



Chauvet reserves the right to use its own discretion to repair or replace returned product(s).



Technical Specifications

Dimensions and	Length	Width	Height	Weight
Weight	12.7 in (323 mm)	11.7 in (298 mm)	4.1 in (106 mm)	10.2 lb (4.6 kg)

Note: Dimensions in inches rounded to the nearest decimal digit.

Electrical	al Power Supply Type		Rai	nge	Voltage Selection	
	Switching (internal)		100 to 240 V, 50/60 Hz		Auto-ranging	
	Parameter	100 V, 60 Hz	120 V, 60 Hz	208 V, 60 Hz	230 V, 50 Hz	240 V, 50 Hz
	Consumption	120 W	118 W	116 W	115 W	115 W
	Operating	1.21 A	1.00 A	0.59 A	0.54 A	0.52 A
	Power linking current (products)	13.6 A (11 products)	13.6 A (13 products)	13.6 A (22 products)	13.6 A (24 products)	13.6 A (25 products)
	Fuse/Breaker	T 3.15 A, 250 V	T 3.15 A, 250 V	T 3.15 A, 250 V	T 3.15 A, 250 V	T 3.15 A, 250 V

	Fuse/Breaker 1 3.15 A, 250 V	1 3.15 A, 250 V 1 3.15 A, 250 V	1 3.15 A, 250 V 1 3.15 A, 250 V
	Power I/O	US/Worldwide	Europe
	Power input connector Power output connector Power cord plug	Neutrik® powerCON® A Neutrik® powerCON® B Edison (US)	Neutrik® powerCON® A Neutrik® powerCON® B Local plug
Light Source	Туре	Power	Lifespan
	LED	7 W	50,000 hours
	Color	Quantity	Current
	Quad-color (RGBA)	18	500 mA
Photometrics	Parameter	Standard Optics	
	Illuminance @ 5 m	1,210 lx	
	Beam angle	18°	
	Field angle	32.5°	
Thermal	Max. External Temperature	Cooling System	
	104 °F (40 °C)	Convection	
DMX	I/O Connectors	Connector Type	Channel Range
	3- and 5-pin XLR	Sockets	4, 6 or 10
Ordering	Product Name	Item Name	Item Code UPC Number



COLORDASHPARQUAD18



781462209605

03030612

COLORdash Par-Quad 18



Contact Us

WORLD HEADQUARTERS - Chauvet

General Information

Technical Support Address: 5200 NW 108th Avenue Voice: (844) 393-7575

Sunrise, FL 33351 Fax: (954) 756-8015

Voice: (954) 577-4455 Email: chauvetcs@chauvetlighting.com (954) 929-5560 Fax:

Toll free: (800) 762-1084 Website: www.chauvetprofessional.com

UNITED KINGDOM AND IRELAND - Chauvet Europe Ltd.

General Information Technical Support

Email: UKtech@chauvetlighting.eu Address: Unit 1C

Brookhill Road Industrial Estate

Pinxton, Nottingham, UK Website: www.chauvetprofessional.eu

NG16 6NT

Voice: +44 (0)1773 511115 +44 (0)1773 511110 Fax:

CHAUVET EUROPE - Chauvet Europe BVBA

General Information Technical Support

Address: Stokstraat 18 Email: BNLtech@chauvetlighting.eu

9770 Kruishoutem Belgium

Website: www.chauvetprofessional.eu

+32 9 388 93 97 Voice:

CHAUVET FRANCE

General Information Technical Support

Address: S3, Rue Ampère Email: FRtech@chauvetlighting.fr

91380 Chilly-Mazarin

France Website: www.chauvetprofessional.eu Voice: +33 1 78 85 33 59

CHAUVET GERMANY

General Information Technical Support

Address: Bruno-Bürgel-Str. 11 Email: DEtech@chauvetlighting.de 28759 Bremen

> Germany Website: www.chauvetprofessional.eu

Voice: +49 421 62 60 20

CHAUVET MEXICO

General Information Address: Av. de las Partidas 34 - 3B

Technical Support

(Entrance by Calle 2) Email: Servicio@chauvet.com.mx Zona Industrial Lerma

Lerma. Edo. de México. Website: www.chauvetprofessional.mx

CP 52000

Voice: +52 (728) 690-2010

Visit the applicable website above to verify our contact information and instructions to request support. Outside the U.S., U.K., Ireland, Mexico, France, Germany, or Benelux, contact the dealer of record.